

## Rio 2000 Filter Operating and Exchange Instructions

### Introduction

Follow the simple instructions given in this leaflet and your filter will supply you with safe, clean drinking water for many years.

### 1. Installation Conditions

For use with COLD water only.  
Maximum Service Flow: 2000 Litres/Hour.  
Maximum Working Pressure: 100psig (689kPa).

### 2. Cartridge Assembly

Take the manifold assembly (B) and ensure that the rubber seal (A) is correctly located into the recess. Push the support tube (C) securely into the central recess on the underside of the manifold. Remove each of the six filter candles (E) from its protective wrap and check that the o-ring seal (D) is located fully onto the threaded spigot. Screw the thread spigot into one of the holes in the underside of the manifold until washer resistance is felt and the moulded cap just touches the ring on the underside of the manifold (B). Do not over tighten. Repeat for all six filter candles. Take the base moulding (F), ensure that the rubber seal (G) is located correctly into the recess and push the base securely onto the support tube (C) to complete the assembly.

### 3. Installation/Replacement

General removal and re-installation of the cartridge assembly is carried out as follows: (For full detailed instructions, see installation instructions supplied with your original housing)  
Isolate the water supply to the filter, vent any pressure and unscrew the filter body. Care should be taken, as it will be full of water.  
The cartridge assembly can now be removed, taking care at all times not to contaminate the inside of the unit, and replaced or cleaned as described below.  
To re-fit the cartridge assembly, ensure that the cartridge assembly is fitted into the sump of the filter with the manifold uppermost.  
Screw the sump gently into the filter head, ensuring that the manifold locates correctly into the head and tighten until a seal is made. Do not over-tighten.

### 4. Conditioning the filter elements

In order to remove any loose particles resulting from manufacture of the filter elements, the water from the filter should be allowed to run to waste for 10 minutes. Allow the filter to stand for 24 hours to condition the filter to the source water and then flush for a further 10 minutes to waste. After carrying out this procedure, the filter is now ready for use.

### 5. General Use

The filtered water can now be used for drinking and preparing food. If the filter has been standing unused for more than 3 days, it is recommended that water be run to waste for 1 minute before use.

### 6. Cleaning the filter elements

Due to filtration of particulate contaminants from the water during use, the flow of water from the filter may reduce over a period of time. To return the water flow to its normal level simply remove, clean and re-fit the cartridge assembly as follows:  
Remove the cartridge assembly as described in section 3.  
Take the assembly to the sink and stand it upright on the base moulding (F/G). Loop the cleaning brush (supplied with the filter) under one of the six ceramic candles, hold under running water and slide the brush up and down until the ceramic is clean. Repeat the cleaning operation on all six ceramic candles, taking care at all times not to contaminate the inside of the unit. Alternatively, each of the six filter candles can be removed and cleaned individually. The cartridge assembly is now ready to re-fit as described in section 3.  
Wash hands thoroughly after cleaning the filter.

### 7. After Sales Service

Contact your local distributor for help and advice or for a pack of replacement filter candles.

Manufactured by Fairey Industrial Ceramics Limited, Newcastle, Staffs, ST5 9BT, England.  
Website: [www.faireyceramics.com](http://www.faireyceramics.com)  
Doulton® and Sterasyl® are registered trademarks.  
Fairey Industrial Ceramics Limited is an authorised user.

Leaflet No.W2393070 Issue 1

