

## **Repositioning Tap Valve**

1. Remove the spout by either unscrewing anti- clockwise or pulling the spout out.
2. Slide the black lever over the hole and off the tap base.
3. Turn the spindle 1 full turn clockwise
4. Slide black lever back over the hole and spindle making sure the spindle slides horizontally across the base underside of the black lever.
5. Replace spout and push lever up and down several times.
6. Should this still not be working correctly repeat the same operation to turns the spindle 1 more time.
7. If the problem still exists please call 0871 890 3334 for assistance.

\*nb occasionally in production the internal parts of the tap mechanism can become misaligned and very occasionally you may have to complete this procedure on a brand new tap.